



Expansion tank closing cover

Pressure relief valve opens at	new closing cover 1.0 ± 0.15 bar gage pressure
	used closing cover 1.0-0.2 bar gage pressure
Vacuum valve starts opening at	0.1 bar vacuum

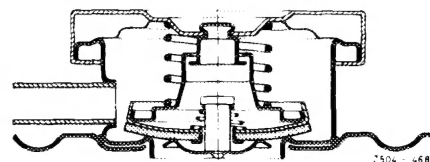

Special tools

Tester for cooling system

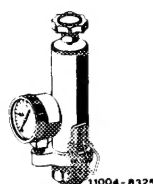

001 589 48 21 00


Double connection for expansion tank
closing cover for cooling system tester



000 589 73 63 00

Checking pressure relief valve

- 1 Attach double connection on tester for cooling system by means of holders.
- 2 Place expansion tank closing cover on double connection.
- 3 Check by pumping opening pressure.

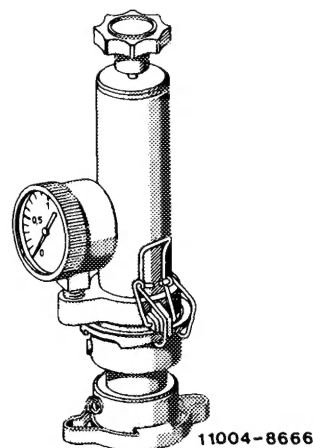

Checking vacuum valve

The vacuum valve (arrow) should rest against rubber seal, valve should lift easily and snap back upon release.

